



**Operation:** Push thumbwheel forward or backward to light, center position is off.

**Low battery Indication:** White LEDs don't light, Red LEDs light dimly. **This is normal** as white LEDs require higher voltage.

**How to change the battery:**

- 1) Unscrew thumb knob at bottom of battery cover.
- 2) Remove battery cover and note sealing ring location.
- 3) Remove battery and install new 9 volt battery with positive pole of battery against battery spring marked +.  
(we recommend **Alkaline** or **Lithium** for **long life**)
- 4) Verify sealing ring is on ledge & install battery cover.
- 5) Screw in thumb knob clockwise until tight.

**How to attach lanyard:** Unscrew thumb knob, slip lanyard ring over business end of thumb knob, screw thumb knob back in.

**5 Year limited warranty:** Rigel Systems, 26850 Basswood, Rancho Palos Verdes CA, 90275 warrants to the original consumer purchaser of its product that the product will be free of defects in material or workmanship 5 years from the date of purchase under normal use. During this warranty period, Rigel Systems will, at its option, repair or replace the product without charge for parts or labor when delivered to Rigel Systems with proof of the date of purchase and a statement of the problem with the product. Shipping and handling charges to Rigel Systems are your responsibility. This warranty does not apply if the product has been altered or repaired by anyone other than Rigel Systems or has been subjected to purchaser abuse, accident, negligence or damage subsequent to purchase including battery damage to product. This warranty excludes incidental or consequential damages resulting from the product or use of the product. **The product is not a toy. Keep away from children.**